



## Transcend Wi-Fi SD Card Compatibility List

2014/09/11

1. This Transcend Wi-Fi SD Card Compatibility List only provides the devices which basic function may be compatible with Transcend Wi-Fi SD Card, and is effective upon its release on Transcend official website. Transcend reserves the right to update this List from time to time.

2. There is no guarantee that Transcend Wi-Fi SD Card is compatible with all devices having SD Card host, or all the functions of listed devices are supported by Transcend Wi-Fi SD Card.

3. For more information about our warranty policy, please check Transcend Warranty Policy.

[Transcend Warranty Policy](#)

○ **Compatible**

× **Not compatible**

Canon				
Model name	Date	Still image shooting	Video recording	Wireless transfer
EOS 1D Mark IV	2009/Q4	○	○	○
EOS 5D Mark III	2012/Q1	○	○	○
EOS 60D	2010/Q3	○	○	○
EOS 6D	2013/Q1	○	○	○
EOS Kiss X2 / EOS Digital Rebel XSi / EOS 450D	2008/Q1	○	○	○
EOS Kiss X3 / EOS Rebel T1i / EOS 500D	2009/Q1	○	○	○
EOS Kiss X4 / EOS Rebel T2i / EOS 550D	2010/Q1	○	○	○
EOS Kiss X5 / EOS Rebel T3i / EOS 600D	2011/Q1	○	○	○
EOS Kiss X6i / EOS Rebel T4i / EOS 650D	2012/Q2	○	○	○
EOS Kiss X7 / EOS Rebel SL1 / EOS 100D	2013/Q1	○	○	○
EOS Kiss X7i / EOS Rebel T5i / EOS 700D	2013/Q2	○	○	○
EOS M	2012/Q4	○	○	○
IXUS 145	2014/Q3	○	○	○
IXY 10S / PowerShot SD3500 IS / IXUS 210	2010/Q1	○	○	○
IXY 200F / PowerShot SD1300 IS / IXUS 105	2010/Q1	○	○	○
IXY 210F / PowerShot ELPH 100 HS / IXUS 115 HS	2011/Q2	○	○	○
IXY 220F / PowerShot ELPH 110 HS / IXUS 125 HS	2012/Q2	○	○	○
IXY 30S / PowerShot SD4000 IS / IXUS 300 HS	2010/Q2	○	○	○
IXY 31S / PowerShot ELPH 500 HS / IXUS 310 HS	2011/Q3	○	○	○
IXY 400F / PowerShot SD1400 IS / IXUS 130	2010/Q2	○	○	○
IXY 50S / PowerShot SD4500 IS / IXUS 1000 HS	2010/Q3	○	○	○
IXY 51S / PowerShot ELPH 510 HS / IXUS 1100 HS	2011/Q3	○	○	○
IXY 600F / PowerShot ELPH 310 HS / IXUS 230 HS	2012/Q1	○	○	○
IXY DIGITAL / PowerShot S100	2011/Q3	○	○	○

IXY DIGITAL 200 / PowerShot S110 / DIGITAL IXUS v	2012/Q4	○	○	○
PowerShot A2400 IS	2012/Q1	○	○	○
PowerShot A2500	2013/Q2	○	○	○
PowerShot A3000 IS	2010/Q1	○	○	○
PowerShot A3400 IS	2012/Q2	○	○	○
PowerShot A4000 IS	2012/Q2	○	○	○
PowerShot A495	2010/Q2	○	○	○
PowerShot D20	2012/Q2	○	○	○
PowerShot G12	2012/Q2	○	○	○
PowerShot G15	2012/Q3	○	○	○
PowerShot G1X	2012/Q1	○	○	○
PowerShot G9	2007/Q2	○	○	○
Powershot S95	2010/Q2	○	○	○
PowerShot SX100 IS	2007/Q3	○	○	○
PowerShot SX150 IS	2011/Q3	○	○	○
PowerShot SX20 IS	2009/Q3	○	○	○
PowerShot SX210 IS	2010/Q2	○	○	○
PowerShot SX230 HS	2011/Q2	○	○	○
PowerShot SX240 HS	2012/Q2	○	○	○
PowerShot SX260 HS	2012/Q2	○	○	○
PowerShot SX40	2011/Q4	○	○	○
PowerShot SX50 HS	2012/Q4	○	○	○
PowerShot SX500 IS	2012/Q3	○	○	○

Casio				
Model name	Date	Still image shooting	Video recording	Wireless transfer
EX-H30	2011/Q1	○	○	○
EX-H5	2010/Q2	○	○	○
EX-S200	2010/Q3	○	○	○
EX-TR100	2011/Q3	○	○	○
EX-TR150	2012/Q2	○	○	○
EX-TR200	2012/Q4	○	○	○
EX-Z2	2009/Q2	○	○	×
EX-Z2000	2010/Q1	○	○	○
EX-Z350	2010/Q2	○	○	○
EX-Z800	2010/Q3	○	○	○

EX-ZR1000	2012/Q4	○	○	○
EX-ZR200	2011/Q4	○	○	○
EX-ZR1200	2014/Q1	○	○	○
EX-ZR1500	2014/Q3	○	○	○

Fujifilm				
Model name	Date	Still image shooting	Video recording	Wireless transfer
FinePix AV130	2010/Q1	○	○	○
FinePix AV200	2011/Q1	○	○	○
FinePix F500EXR	2011/Q1	○	○	○
FinePix F770EXR	2012/Q1	○	○	○
FinePix F80EXR	2012/Q3	○	○	○
FinePix HS10	2010/Q1	○	○	○
FinePix HS20EXR	2011/Q1	○	○	○
FinePix HS25EXR	2012/Q1	○	○	○
FinePix HS50EXR	2013/Q1	○	○	○
FinePix S2800HD	2010/Q3	○	○	○
FinePix SL300	2013/Q1	○	○	○
FinePix X100/X100S	2013/Q1	○	○	○
FinePix XP10/XP11	2010/Q1	○	○	○
FinePix XP50	2012/Q1	○	○	○
FinePix Z700EXR	2010/Q1	○	○	○
FinePix Z900EXR	2011/Q2	○	○	○
X10*	2011/Q3	○	○	○
XF1	2012/Q3	○	○	○
X-Pro1	2012/Q1	○	○	○
X-S1	2011/Q4	○	○	○

\*The Wi-Fi will not shot down when the camera is off, please turn off Wi-Fi manually by app.

GoPro				
Model name	Date	Still image shooting	Video recording	Wireless transfer
HD HERO	2010/Q1	○	○	○
HD HERO2	2011/Q4	○	○	○

**JVC**

Model name	Date	Still image shooting	Video recording	Wireless transfer
GC-PX10	2011/Q4	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

**Nikon**

Model name	Date	Still image shooting	Video recording	Wireless transfer
Coolpix A	2013/Q1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Coolpix AW100	2011/Q4	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Coolpix L25	2012/Q4	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Coolpix L810	2012/Q2	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Coolpix P310	2012/Q1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Coolpix P500	2011/Q1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Coolpix P510	2012/Q1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
CoolPix P7000	2010/Q3	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Coolpix P7700	2012/Q3	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Coolpix S1100PJ	2010/Q3	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Coolpix S30	2012/Q1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Coolpix S2800	2014/Q3	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Coolpix S4000	2010/Q1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Coolpix S4300	2012/Q1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Coolpix S8000	2010/Q1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Coolpix S8200	2011/Q3	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Coolpix S9100	2011/Q1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Coolpix S9200	2012/Q2	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Coolpix S9300	2012/Q1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Coolpix S9400	2014/Q1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
D300s*	2009/Q3	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
D3100*	2010/Q3	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
D3200*	2012/Q2	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
D5100*	2011/Q2	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
D5200*	2012/Q4	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
D600*	2012/Q3	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
D610*	2014/Q3	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

D7000*	2010/Q3	○	○	○
D7100*	2013/Q1	○	○	○
D800/D800E*	2012/Q1	○	○	○
D90*	2008/Q3	○	○	○
J1	2011/Q3	○	○	○
J2	2012/Q4	○	○	○
J3	2013/Q1	○	○	○
V1	2011/Q3	○	○	○
V2	2012/Q4	○	○	○

\*Please adjust "Auto-meter off delay" or "Stand by time" in C2 setting in order to avoid Wi-Fi disconnection.  
Or turn-on "Live View" when using Wi-Fi transmission.

Olympus				
Model name	Date	Still image shooting	Video recording	Wireless transfer
E-5	2010/Q3	○	○	○
E-P3	2011/Q2	○	○	○
E-PL2	2011/Q1	○	○	○
E-PL5	2012/Q3	○	○	○
OM-D E-M5 ★	2012/Q1	○	○	○
SH-25MR	2012/Q2	○	○	○
SP-810UZ	2011/Q3	○	○	○
TOUGH TG-610	2011/Q1	○	○	○
TOUGH TG-810	2011/Q1	○	○	○
VG-170	2012/Q2	○	○	○
XZ-1	2011/Q1	○	○	○
XZ-2	2012/Q3	○	○	○

★ In some special conditions, this model can only recognize the Wi-Fi SD card if you insert the card while the camera is turned on.

Panasonic				
Model name	Date	Still image shooting	Video recording	Wireless transfer
DMC-G2	2010/Q1	◎	○	▲
DMC-G5	2012/Q3	◎	○	▲

DMC-G5X	2012/Q3	◎	○	▲
DMC-GF5	2012/Q2	○	○	○
DMC-GX1	2011/Q4	○	○	○
DMC-FH3	2010/Q1	◎	◎	▲
DMC-FP1	2010/Q1	◎	○	▲
DMC-FP3	2010/Q1	○	◎	▲
DMC-FX700	2010/Q4	◎	○	▲
DMC-FZ100	2010/Q3	◎	○	▲
DMC-S1	2013/Q1	○	○	▲
DMC-TS2	2010/Q1	○	◎	▲
DMC-ZS7	2010/Q1	◎	○	▲

◎ Continuous shooting or video recording while Wi-Fi is turned on may cause errors to the cameras.  
Please turn-off Wi-Fi when continuous shooting or video recording.

▲ Wi-Fi will be disconnected while the camera is in continuous shooting mode or video recording mode.

Pentax				
Model name	Date	Still image shooting	Video recording	Wireless transfer
K-01	2012/Q1	○	○	○
K-30	2012/Q2	○	○	○
K-5	2010/Q3	○	◎	○
K-5 II	2012/Q3	○	○	○
K-R	2010/Q3	○	○	○
Optio VS20	2012/Q1	○	○	○
Q	2011/Q2	○	○	○
X-5	2012/Q4	○	○	○

◎Video recording may stop after a certain period. (4~5mins)

Samsung				
Model name	Date	Still image shooting	Video recording	Wireless transfer
PL20	2011/Q1	○	○	○

**Sigma**

Model name	Date	Still image shooting	Video recording	Wireless transfer
DP2M	2012/Q1	○	○	○

**Sony**

Model name	Date	Still image shooting	Video recording	Wireless transfer
DSC-HX200V	2012/Q1	○	○	○
DSC-HX300	2013/Q4	○	○	○
DSC-HX5V	2010/Q1	×	×	×
DSC-RX100	2012/Q2	○	○	○
DSC-TX100V*	2011/Q1	○	○	○
DSC-TX5	2010/Q1	×	×	×
DSC-TX7	2010/Q1	×	×	×
DSC-TX9	2010/Q3	×	×	×
DSC-W380	2010/Q1	○	○	○
DSC-W810	2014/Q3	○	○	○
DSC-WX7	2011/Q1	×	×	×
DSLR-α55	2009/Q3	×	×	×
DSLR-α57	2012/Q1	○	○	○
DSLR-α65	2011/Q3	○	○	○
DSLR-α77	2011/Q3	○	○	○
DSLR-α99	2012/Q3	○	○	○
NEX-3N	2013/Q1	○	○	○
NEX-5	2010/Q2	○	○	○
NEX-5R	2012/Q3	○	○	○
NEX-6	2012/Q3	○	○	○
NEX-7	2011/Q2	○	○	○
NEX-C3	2011/Q2	○	○	○
NEX-F3	2012/Q2	○	○	○

\*May have problems after formatting the Card on the camera, and would suggest executing the format function on PC.