

## Wi-Fi SD 카드 호환 가능한 목록

2015/02/24

1. 아래 호환 가능 카메라 목록은 트랜센드 Wi-Fi SD 카드의 기본적인 기능이 호환되는 기종이며, 트랜센드 웹사이트에서도 확인하실 수 있습니다. 호환 가능한 목록은 지속적으로 업데이트 될 예정입니다.

2. 트랜센드 Wi-Fi SD카드는 SD카드를 지원하는 모든 기기에서 지원되지는 않습니다.

3. 보다 자세한 정보는 트랜센드의 품질 보증 정책을 참조하십시오.

[트랜센드 제품 보증 정책](#)

○ 호환 가능

× 호환 불가능

Canon				
Model name	Date	Still image shooting	Video recording	Wireless transfer
EOS 1D Mark IV	2009/Q4	○	○	○
EOS 5D Mark III	2012/Q1	○	○	○
EOS 60D	2010/Q3	○	○	○
EOS 6D	2013/Q1	○	○	○
EOS Kiss X2 / EOS Digital Rebel XSi / EOS 450D	2008/Q1	○	○	○
EOS Kiss X3 / EOS Rebel T1i / EOS 500D	2009/Q1	○	○	○
EOS Kiss X4 / EOS Rebel T2i / EOS 550D	2010/Q1	○	○	○
EOS Kiss X5 / EOS Rebel T3i / EOS 600D	2011/Q1	○	○	○
EOS Kiss X6i / EOS Rebel T4i / EOS 650D	2012/Q2	○	○	○
EOS Kiss X7 / EOS Rebel SL1 / EOS 100D	2013/Q1	○	○	○
EOS Kiss X7i / EOS Rebel T5i / EOS 700D	2013/Q2	○	○	○
EOS M	2012/Q4	○	○	○
IXUS 145	2014/Q3	○	○	○
IXY 10S / PowerShot SD3500 IS / IXUS 210	2010/Q1	○	○	○
IXY 200F / PowerShot SD1300 IS / IXUS 105	2010/Q1	○	○	○
IXY 210F / PowerShot ELPH 100 HS / IXUS 115 HS	2011/Q2	○	○	○
IXY 220F / PowerShot ELPH 110 HS / IXUS 125 HS	2012/Q2	○	○	○
IXY 30S / PowerShot SD4000 IS / IXUS 300 HS	2010/Q2	○	○	○
IXY 31S / PowerShot ELPH 500 HS / IXUS 310 HS	2011/Q3	○	○	○
IXY 400F / PowerShot SD1400 IS / IXUS 130	2010/Q2	○	○	○
IXY 50S / PowerShot SD4500 IS / IXUS 1000 HS	2010/Q3	○	○	○
IXY 51S / PowerShot ELPH 510 HS / IXUS 1100 HS	2011/Q3	○	○	○
IXY 600F / PowerShot ELPH 310 HS / IXUS 230 HS	2012/Q1	○	○	○
IXY 90F / PowerShot ELPH 115 HS / IXUS 132	2013/Q1	○	◎	○
IXY DIGITAL / PowerShot S100	2011/Q3	○	○	○
IXY DIGITAL 200 / PowerShot S110 / DIGITAL IXUS v	2012/Q4	○	○	○

PowerShot A2400 IS	2012/Q1	○	○	○
PowerShot A2500	2013/Q2	○	○	○
PowerShot A3000 IS	2010/Q1	○	○	○
PowerShot A3400 IS	2012/Q2	○	○	○
PowerShot A4000 IS	2012/Q2	○	○	○
PowerShot A495	2010/Q2	○	○	○
PowerShot D20	2012/Q2	○	○	○
PowerShot G12	2012/Q2	○	○	○
PowerShot G15	2012/Q3	○	○	○
PowerShot G1X	2012/Q1	○	○	○
PowerShot G9	2007/Q2	○	○	○
Powershot S95	2010/Q2	○	○	○
PowerShot SX100 IS	2007/Q3	○	○	○
PowerShot SX150 IS	2011/Q3	○	○	○
PowerShot SX20 IS	2009/Q3	○	○	○
PowerShot SX210 IS	2010/Q2	○	○	○
PowerShot SX230 HS	2011/Q2	○	○	○
PowerShot SX240 HS	2012/Q2	○	○	○
PowerShot SX260 HS	2012/Q2	○	○	○
PowerShot SX40	2011/Q4	○	○	○
PowerShot SX50 HS	2012/Q4	○	○	○
PowerShot SX500 IS	2012/Q3	○	○	○

© Continuous shooting or video recording while Wi-Fi is turned on may cause errors to the cameras.  
Please turn-off Wi-Fi when continuous shooting or video recording.

Casio				
Model name	Date	Still image shooting	Video recording	Wireless transfer
EX-H30	2011/Q1	○	○	○
EX-H5	2010/Q2	○	○	○
EX-S200	2010/Q3	○	○	○
EX-TR100	2011/Q3	○	○	○
EX-TR150	2012/Q2	○	○	○
EX-TR200	2012/Q4	○	○	○
EX-Z2	2009/Q2	○	○	×
EX-Z2000	2010/Q1	○	○	○
EX-Z350	2010/Q2	○	○	○
EX-Z800	2010/Q3	○	○	○
EX-ZR1000	2012/Q4	○	○	○

EX-ZR200	2011/Q4	○	○	○
EX-ZR1200	2014/Q1	○	○	○
EX-ZR1500	2014/Q3	○	○	○

Fujifilm				
Model name	Date	Still image shooting	Video recording	Wireless transfer
FinePix AV130	2010/Q1	○	○	○
FinePix AV200	2011/Q1	○	○	○
FinePix F500EXR	2011/Q1	○	○	○
FinePix F770EXR	2012/Q1	○	○	○
FinePix F80EXR	2012/Q3	○	○	○
FinePix HS10	2010/Q1	○	○	○
FinePix HS20EXR	2011/Q1	○	○	○
FinePix HS25EXR	2012/Q1	○	○	○
FinePix HS50EXR	2013/Q1	○	○	○
FinePix S2800HD	2010/Q3	○	○	○
FinePix SL300	2013/Q1	○	○	○
FinePix X100/X100S	2013/Q1	○	○	○
FinePix XP10/XP11	2010/Q1	○	○	○
FinePix XP50	2012/Q1	○	○	○
FinePix Z700EXR	2010/Q1	○	○	○
FinePix Z900EXR	2011/Q2	○	○	○
X10*	2011/Q3	○	○	○
XF1	2012/Q3	○	○	○
X-Pro1	2012/Q1	○	○	○
X-S1	2011/Q4	○	○	○

\* 카메라 전원이 꺼져 있을 시, 와이파이기가 자동으로 종료되지 않으니 직접 와이파이를 꺼주시기 바랍니다.

GoPro				
Model name	Date	Still image shooting	Video recording	Wireless transfer
HD HERO	2010/Q1	○	○	○
HD HERO2	2011/Q4	○	○	○

**JVC**

Model name	Date	Still image shooting	Video recording	Wireless transfer
GC-PX10	2011/Q4	○	○	○

**Nikon**

Model name	Date	Still image shooting	Video recording	Wireless transfer
Coolpix A	2013/Q1	○	○	○
Coolpix AW100	2011/Q4	○	○	○
Coolpix L25	2012/Q4	○	○	○
Coolpix L810	2012/Q2	○	○	○
Coolpix P310	2012/Q1	○	○	○
Coolpix P500	2011/Q1	○	○	○
Coolpix P510	2012/Q1	○	○	○
Coolpix P530	2014/Q1	○	○	○
CoolPix P7000	2010/Q3	○	○	○
Coolpix P7700	2012/Q3	○	○	○
Coolpix S1100PJ	2010/Q3	○	○	○
Coolpix S30	2012/Q1	○	○	○
Coolpix S2800	2014/Q3	○	○	○
Coolpix S4000	2010/Q1	○	○	○
Coolpix S4300	2012/Q1	○	○	○
Coolpix S8000	2010/Q1	○	○	○
Coolpix S8200	2011/Q3	○	○	○
Coolpix S9100	2011/Q1	○	○	○
Coolpix S9200	2012/Q2	○	○	○
Coolpix S9300	2012/Q1	○	○	○
Coolpix S9400	2014/Q1	○	○	○
D300s*	2009/Q3	○	○	○
D3100*	2010/Q3	○	○	○
D3200*	2012/Q2	○	○	○
D5100*	2011/Q2	○	○	○
D5200*	2012/Q4	○	○	○
D600*	2012/Q3	○	○	○
D610*	2014/Q3	○	○	○
D7000*	2010/Q3	○	○	○
D7100*	2013/Q1	○	○	○
D800/D800E*	2012/Q1	○	○	○
D90*	2008/Q3	○	○	○

J1	2011/Q3	○	○	○
J2	2012/Q4	○	○	○
J3	2013/Q1	○	○	○
V1	2011/Q3	○	○	○
V2	2012/Q4	○	○	○

\* Wi-Fi 연결 끊김을 방지하기 위해 C2셋팅에서 반 누름 타이머 또는 대기 타이머를 조정해 주시거나 라이브 뷰 모드를 사용해 주시기 바랍니다.

Olympus				
Model name	Date	Still image shooting	Video recording	Wireless transfer
E-5	2010/Q3	○	○	○
E-P3	2011/Q2	○	○	○
E-PL2	2011/Q1	○	○	○
E-PL5	2012/Q3	○	○	○
OM-D E-M5 ★	2012/Q1	○	○	○
SH-25MR	2012/Q2	○	○	○
SP-810UZ	2011/Q3	○	○	○
TOUGH TG-610	2011/Q1	○	○	○
TOUGH TG-810	2011/Q1	○	○	○
VG-170	2012/Q2	○	○	○
XZ-1	2011/Q1	○	○	○
ZX-2	2012/Q3	○	○	○
XZ-10	2013/Q1	○	○	○

★ Wi-Fi SD카드 신호 생성을 위해 카메라 전원이 켜진 후 카드를 넣어주시기 바랍니다.

Panasonic				
Model name	Date	Still image shooting	Video recording	Wireless transfer
DMC-G2	2010/Q1	◎	○	▲
DMC-G5	2012/Q3	◎	○	▲
DMC-G5X	2012/Q3	◎	○	▲
DMC-GF5	2012/Q2	◎	○	○
DMC-GX1	2011/Q4	◎	○	○
DMC-FH3	2010/Q1	◎	◎	▲
DMC-FP1	2010/Q1	◎	○	▲

DMC-FP3	2010/Q1	○	◎	▲
DMC-FX700	2010/Q4	◎	○	▲
DMC-FZ100	2010/Q3	◎	○	▲
DMC-S1	2013/Q1	○	○	▲
DMC-TS2	2010/Q1	○	◎	▲
DMC-ZS25	2015/Q1	○	○	▲
DMC-ZS7	2010/Q1	◎	○	▲

◎ Wi-Fi 기능이 켜져 있는 상태에서 연속 촬영 또는 동영상 촬영을 하면 카메라에 오류가 발생할 수 있기 때문에 연속 촬영 또는 동영상 촬영 시, Wi-Fi 기능을 꺼주시기 바랍니다.

▲ 카메라가 연속 촬영모드 또는 동영상 촬영 모드에서 Wi-Fi가 연결이 끊깁니다.

Pentax				
Model name	Date	Still image shooting	Video recording	Wireless transfer
K-01	2012/Q1	○	○	○
K-30	2012/Q2	○	○	○
K-5	2010/Q3	○	◎	○
K-5 II	2012/Q3	○	○	○
K-R	2010/Q3	○	○	○
Optio VS20	2012/Q1	○	○	○
Optio WG-3	2013/Q2	○	○	○
Q	2011/Q2	○	○	○
X-5	2012/Q4	○	○	○

◎동영상 촬영 시작 후 4~5분 후에 녹화가 중지될 수 있습니다.

Samsung				
Model name	Date	Still image shooting	Video recording	Wireless transfer
PL20	2011/Q1	○	○	○

Sigma				
Model name	Date	Still image shooting	Video recording	Wireless transfer
DP2M	2012/Q1	○	○	○

Sony				
Model name	Date	Still image shooting	Video recording	Wireless transfer
DSC-HX200V	2012/Q1	○	○	○
DSC-HX300	2013/Q4	○	○	○
DSC-HX5V	2010/Q1	×	×	×
DSC-RX100	2012/Q2	○	○	○
DSC-TX100V*	2011/Q1	○	○	○
DSC-TX5	2010/Q1	×	×	×
DSC-TX7	2010/Q1	×	×	×
DSC-TX9	2010/Q3	×	×	×
DSC-W380	2010/Q1	○	○	○
DSC-W810	2014/Q3	○	○	○
DSC-WX7	2011/Q1	×	×	×
DSLR-α55	2009/Q3	×	×	×
DSLR-α57	2012/Q1	○	○	○
DSLR-α65	2011/Q3	○	○	○
DSLR-α77	2011/Q3	○	○	○
DSLR-α99	2012/Q3	○	○	○
NEX-3	2013/Q1	○	○	○
NEX-3N	2013/Q1	○	○	○
NEX-5	2010/Q2	○	○	○
NEX-5R	2012/Q3	○	○	○
NEX-6	2012/Q3	○	○	○
NEX-7	2011/Q2	○	○	○
NEX-C3	2011/Q2	○	○	○
NEX-F3	2012/Q2	○	○	○

\* 카메라에서 카드를 포맷한 후에도 문제가 발생할 수 있으므로, PC에서 포맷하는 것을 권장합니다.